



# MacBook Air 11" Late 2010 Right Speaker Replacement

Replace the right speaker on your MacBook Air 11" Late 2010.

Written By: Andrew Bookholt



## INTRODUCTION

Use this guide to replace a blown speaker on the right side of your MacBook Air.



### TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)



### PARTS:

- [MacBook Air 11" \(Late 2010/Mid 2011\) Right Speaker](#) (1)

## Step 1 — Lower Case



- ✦ Before proceeding, close your computer and lay it on a soft surface top-side down.
- Remove the following ten screws:
  - Two 8 mm 5-point Pentalobe screws
  - Eight 2.5 mm 5-point Pentalobe screws
- ⓘ The special screwdriver needed to remove the eight 5-point Pentalobe screws can be found [here](#).


## Step 2



- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.
- Remove the lower case and set it aside.



## Step 3 — Battery

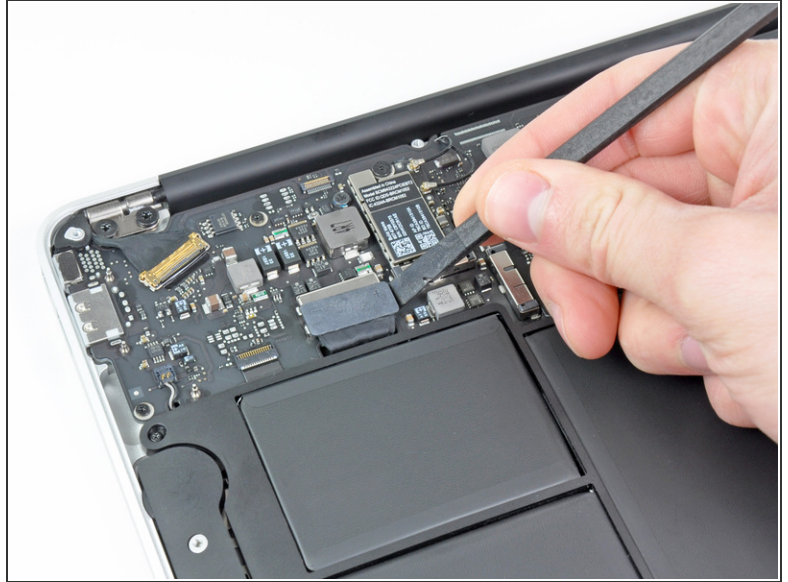


- Use the flat end of a spudger to pry both short sides of the battery connector upward to disconnect it from its socket on the logic board.
- Bend the battery cable slightly away from the logic board so the connector will not accidentally contact its socket.


## Step 4



- Remove the following five screws securing the battery to the upper case:
  - Two 5.2 mm T5 Torx screws
  - One 6 mm T5 Torx screw
  - Two 2.6 mm T5 Torx screws

## Step 5

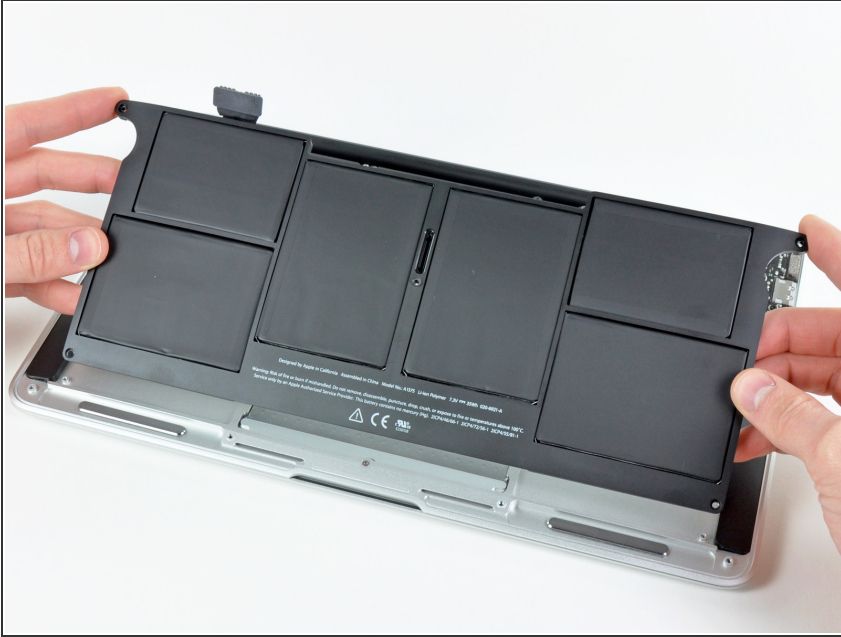

 When handling the battery, avoid squeezing or touching the six exposed lithium polymer cells.

- Lift the battery from its edge nearest the logic board and remove it from the upper case.


## Step 6 — Right Speaker




- Use the tip of a spudger to de-route the right speaker cable from the channel cut into the logic board.



## Step 7

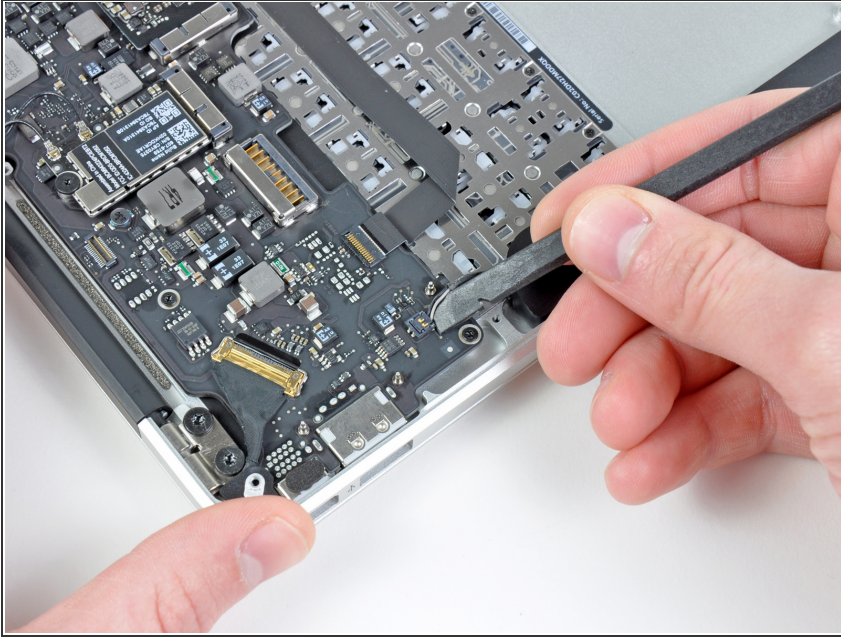


- Use the flat end of a spudger to pry the right speaker cable connector up and out of its socket on the logic board.

 Pry upward from beneath the wires.

## Step 8



- Use the flat end of a spudger to pry the right speaker off the adhesive securing it to the upper case.

 Only pry up on the speaker from the areas of bare aluminum on the upper case. Prying up from the keyboard area may damage the keyboard and the speaker itself.

- Remove the right speaker from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 10:06:11 AM.